AGP^M PELLET STOVE & INSERT



ALL MODELS 2020 EPA CERTIFIED


NEVER BE COLD AGAIN!



EASY TO LIVE WITH...



Designed to burn all grades of wood pellets

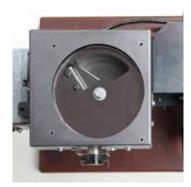

HRD Rotary Disc Feed System



Stainless Steel Burn Platform



Watch a video on how the HRD works

WHY DO WE CALL IT THE AGP?

We've designed the AGP insert and freestanding stove to burn "All Grades of Pellets". From the hopper to the ashpan, we have created features that allow you to burn low grade wood pellets as efficiently and effectively as possible. These AGP units are extremely clean-burning, emitting less then two gram of emissions per hour.

EPA Certified Emissions and Efficiency

Emissions: STOVE - 1.8 Grams/Hr* INSERT - 0.98 Gram/Hr* Maximum Efficiency: 76% *Emissions number was achieved using the EPA method 5-G and 28A

With a unique fuel delivery system we've eliminated many of the maintenance headaches previously associated with owning a pellet stove or insert.

- NO overfeeding = NO wasted, unburned pellet fuel
- NO problem with pellet fines blocking the auger
- NO burn backs, insuring safe operation

The heart of the system is the Horizontal Rotary Disc (HRD). Its purpose is two-fold:

- It controls the amount of fuel that leaves the hopper and enters the auger
- There is no direct path between the burning fuel and hopper, thus eliminating any chance of burn backs

As the layered disc rotates, fuel leaves the hopper and enters the holding area, which is the space between the hopper and the auger. The disc rotates 180 degrees before the holding area opens, allowing the fuel to drop onto the auger. By doing this the two openings (upper and lower) are never simultaneously aligned, thus delivering a precise amount of fuel and eliminating any chance of a burn back.

The horizontal auger moves the fuel from the drop zone to the inclined platform. By being horizontal it offers two distinct advantages:

- Along with the pellets it moves the pellet fines onto the burn platform to be burned, instead of causing a potential maintenance issue = more heat, less waste.
- Less stress on the auger motor = long life with years of smooth, quiet operation.

Burn platform: This is where intense combustion occurs. The design and materials used in the burn platform have everything to do with the long life of the components and a happy homeowner. The burn platform is made of long-life, high-grade 309 stainless steel that is 3/16" thick. The inclined floor of the burn platform is at a 14 degree angle which is very important to the combustion performance. At 14 degrees it is self-tuned to burn the fuel completely and still maintain its self-cleaning benefit. As new fuel enters the platform, ash and particulate matter is pushed into the ashpan for easy removal as routine maintenance dictates. By being self-cleaning, the homeowner is rarely required to remove any unburned clinkers- but if necessary, to assist the system burn platform clean out tool provided does it with ease.

EASY TO OWN!

- 1. 80 lbs. Capacity Hopper
- Horizontal Rotary Disk (HRD) Feed with Case Hardened, Replaceable Shear Blade
- 3. Drive Motor for HRD
- 4. Pellet Holding Chamber
- 5. Fire Chamber
- 6. Primary Fuel Feed Push Auger
- 7. Drive Motor for Auger
- 8. Stainless Steel Burn Platform
- 9. Ash Pan
- 10. 165 CFM Combustion Fan
- 11. Negative Pressure Flow Switch
- 12. Outside Combustion Air
- 13. Combustion Air Restrictor
- 14. (a) Air Wash (Bottom)
- 14. (b) Air Wash (Top)
- 15. Ceramic Glass Door
- 16. External Heat Exchange Tubes
- 17. 3" Exhaust
- 18. Easy to Understand Controls
- 19. High Heat Transfer Convection Fan (Not shown)

STATE-OF-THE-ART CONTROL PANELS

The operation is controlled by an easy to understand control board.



Simple To Use Control Panel on AGP Stove

Seven control functions and features:

- 1. Start Button
 - 2. Stop Button
- 3. Heat Control
- 4. Fan Control*
- 5. Thermostat
- 6. LED Light
- - 7. System Fuse

- Starts the units - Stops the units

14ł

15

- Adjust the heat output from low to high. 1.4 lbs. – 5 lbs. per hour

9

- Adjust the room air fan to move air through the units and into the home.
- Allows the units to be controlled by a remote thermostat.
- Illuminates panel for easy reading of controls. AGP insert only.
- Easy access to replace the fuse if needed AGP Insert only.



Simple To Use Control Panel on AGP Insert



17

12

1

13

10

* Combine the heat and fan functions to operate together. Simply turn the fan control all the way to the left until the BLUE "Auto Fan" light illuminates.

AGPTM PELLET STOVE

TK



Watch the AGP Stove Homeowners Video.

EPA Certified Only 1.8 Grams/Hour

MODEL OPTIONS The Lopi AGP Pellet Stove is available in three finishes, Black Paint, Rust Patina* and Stainless Steel. *The very popular Rust Patina is unique on each model due to the hand applied method of the finish. Black Paint Rust Patina* **Stainless Steel** Hopper Btu/Hour Heating **Burn Rate** Turn Down Glass **Burn Times** Range*** Per Hour Capacity Capacity** Ratio Area 800 to On Low - 57 Hours Low -8,959 1.4 lbs. on Low 80 lbs. 72% 127 Sq. In. On High - 16 Hours 2,000 Sq. Ft. High - 34,738 5 lbs. on High

** HEATING CAPACITY may vary depending on the degree of home insulation, floor plan and ambient temperature zone of the area in which you live. BTU/Hour range will vary with the quality, size and brand of pellets used.


*** Based on 8,200 BTUs per pound.

AGP STOVE


The AGP Pellet Stove offers all the benefits of wood heating plus fuel that is clean, compact and easy to use. This freestanding stove is ideal for heating any medium to large living space, giving off a radiant warmth for up to 2,000 square feet. The roaring flames are surrounded by a beautifully arched door that presents a timeless look and will accompany any personal style. The fire viewing area features a super-efficient airwash system to keep the glass clean. With a large, easily removable ashpan and an 80lb. hopper capacity, this stove has the ability to produce extremely long burn times up to 57 hours when burning on a low setting. The AGP freestanding stove is also considered a very clean-burning appliance- producing less than one gram of emissions per hour. The HRD[™] rotary feed system prevents over feeding, blockage and burn backs to make for hassle-free operation.

Straight -Through The Wall Installation



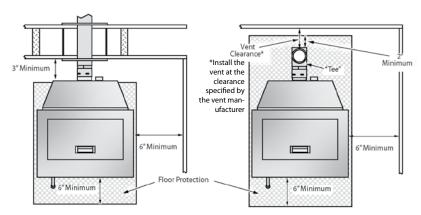

Corner - Through The Wall Installation

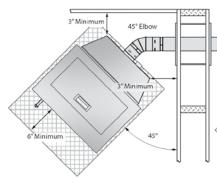

STOVE DIMENSIONS

Interior Vertical Vent Installation

Minimum

Vent Clearance

2^e Minir

MINIMUM CLEARANCES TO COMBUSTIBLE WALLS

Stove clearances measured from top of stove. Connector clearances measured from exhaust vent.


FLOOR PROTECTION

The pellet stove must be installed on a non-combustible surface protector extending the full width and depth of the heater and extending 6" (153mm) in front and 2" (51mm) to each side and under the rear exhaust Tee. Hearth protection must be a minimum .018" thick (26 gauge).

ALCOVE REQUIREMENTS

When installed in an alcove with a ceiling height less than 7 ft (2.134 M).

- Minimum Height is 60" with 6" side and 3" rear clearance to wall.
- Minimum Width is 36-9/16" with min. clearance of 3" for horizontal venting.
- Maximum depth is 48" with minimum clearance of 2" from pipe for vertical venting.

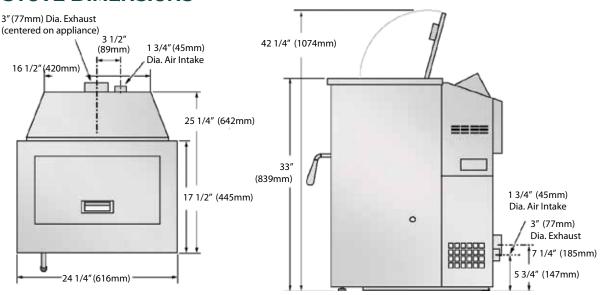

AGPTM PELLET INSERT





EPA Certified Only 0.98 Grams/Hour

MODEL OPTIONS

The Lopi AGP Pellet Insert is available in three finishes, Black Paint, Rust Patina* and Stainless Steel.

*The very popular rust patina is unique on each model due to the hand applied method of the finish.





Stainless Steel

		Diacitre		nastrutina	Stan	less steel
Adjustable Hopper	Heating Capacity**	Burn Times*	High to Low Turn Down*	Btu/Hour Range***	Burn Rate Per Hour*	Glass Area
40 to 70 lbs.	Up to 2,000 Sq. Ft.	On Low - 50 Hours On High - 28 Hours	72%	Low - 8,320 High - 33,686	1.4 lbs. on Low 5 lbs. on High	127 Sq. In.

** HEATING CAPACITY may vary depending on the degree of home insulation, floor plan and ambient temperature zone of the area in which you live. BTU/Hour range, Turn down ratio and burn times will vary with the quality, size and brand of pellets used. Burn times based on 70 lb. fuel load. *** Based on 8,200 BTUs per pound.

MINIMUM FIREPLACE CLEARANCES

AGP INSERT

The AGP insert employs the same innovative technology as the AGP freestanding stove, but is ideal for converting an inefficient, open fireplace into a beautiful source of heat for your home. This environmentally sound way to heat your home produces less than one gram of emissions per hour and burns ALL GRADES of wood pellets that are made from all-natural wood by-products. This low maintenance insert comes standard with an easy removal ashpan and its HRD delivery system that prevents blocking, jamming and burn backs. Up to 70lbs. of pellets can be loaded into the large hopper at once, allowing for long burn times and less time spent loading the hopper.

Pellet Insert Venting


Lopi has partnered with Duravent Mfg. to offer two great cost effective venting options specifically designed for the AGP insert. Ask your Lopi Dealer for details.

3" AGP Pellet Insert Masonry 20' Liner Kit Part # 98900052

4" AGP Pellet Insert Masonry 35' Liner Kit Part # 98900053

FLOOR PROTECTION

The pellet insert must be installed on a non-combustible surface. A non-combustible hearth must extend 6" to the front and sides of the firebox opening Hearth protection must be a minimum .018" thick (26 gauge).

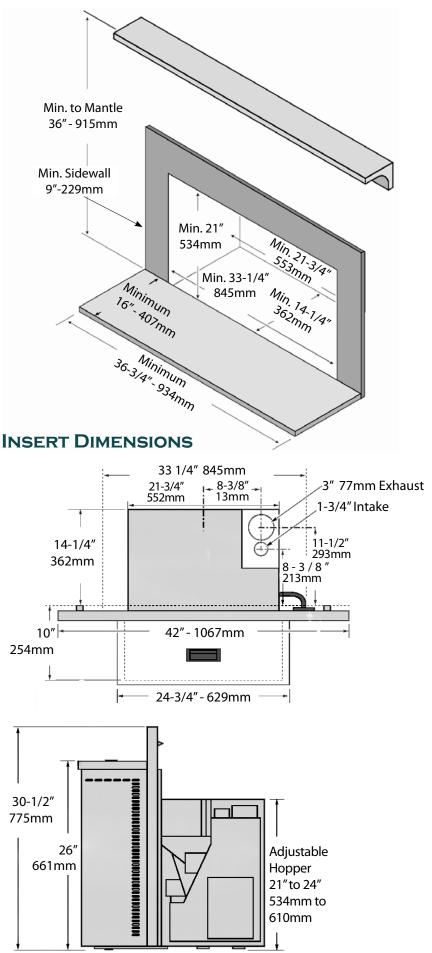



CHILD SAFETY

If you have small children at home or visiting, we recommend you purchasing a safety screen or guard to prevent accidental contact with the hot surfaces of the stove.

TESTING

Listed Pelletized Solid Fuel Burning Appliance. Also for use in mobile homes. Certified for the US and Canada.

Conforms to ASTM E1509-04, Room Heater Pellet Burning Type (UM) 84 HUD; Certified to ULC S627. Tested and listed for mobile homes in accordance with OAR 814-23-900 through 814-23-909. Tested and Listed by Intertek.

ELECTRICAL SPECIFICATIONS

Electrical Rating	115 Volts, 3 Amps, 60 Hz
Watts during Start-Up Sequence	350 (approximately)
Watts during Operation	250 (approximately)

Use the installation illustrations as a guide only. For complete installation instructions please refer to your Lopi Dealer or go to the AGP Pellet Insert product page at www.LopiStoves.com.

<u>NOTE:</u> Improper installation of your pellet appliance or failure to operate it in accordance to the guidelines detailed in the Owner's Manual may negate your warranty and endanger your home and family.



www.lopistoves.com Manufactured in Mukilteo, WA

YOUR LOPI AUTHORIZED DEALER:





©2019/10 Printed in U.S.A. - #98800724

Lopi reserves the right to alter or improve its products at any time without notification. All trademarks belong to Travis Industries. For installation specifications refer to the Owner's Manual found on the Lopi website. U.S. and Foreign Patents Pending.